

078799 | Legrand FP



Commande infrarouge pour vidéo projecteur - Mosaic - Fonction ON et veille

Réf 078799

165.82€^{TTC*}

Voir le produit : <https://www.domomat.com/43471-commande-infrarouge-pour-video-projecteur-mosaic-fonction-on-et-veille-legrand-078799.html>


Le produit Commande infrarouge pour vidéo projecteur - Mosaic - Fonction ON et veille est en vente chez Domomat !




- Commande On/veille IR
- IR-bediening On/Standy
- ON/standby IR control
- IR Steuerung On/Standy
- Mando IR ON/Espere
- 0 673 69/0 787 99

- Comando On/Standby IR
- Εντολή Οn/Αναμονή IR
- ВКЛ/Ожид. ИК УУ
- Açma/Bekleme IR kumandası

 legrand®

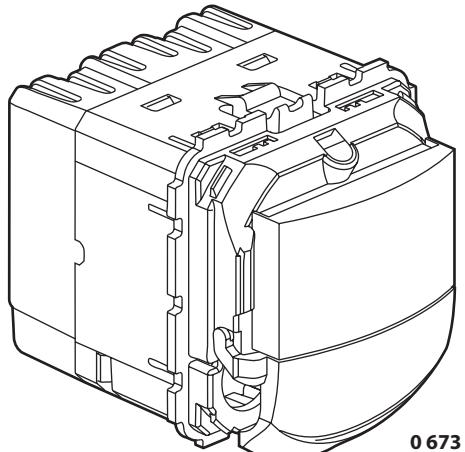

0 673 69

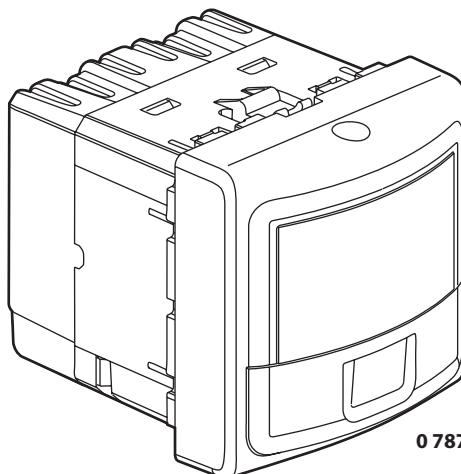

0 787 99

- Caractéristiques
- Kenmerken
- Characteristics

- Technische Daten
- Características
- Características

- Χαρακτηριστικά
- Технические характеристики
- Teknik özellikler

	+ 45°C + 5°C		
100 VAC 240 VAC 50/60 Hz	1 x 1.5 mm ²		

Technologie	Infrarouge Plage de fréquences : de 20kHz à 60kHz Longeur d'onde de 940nm
Technologie	Infrarrood Frequentiebereik: van 20kHz tot 60kHz Golfengte: 940nm
Technology	Infrared Frequency range: 20kHz to 60kHz Wavelength: 940nm


Technologie	Infrarot Frequenzbereich: 20kHz bis 60kHz Wellenlänge: 940nm
Tecnología	Infrarrojos Intervalo de frecuencias: de 20kHz a 60kHz Longitud de onda 940nm
Tecnologia	Infravermelhos Faixa de frequências: 20kHz a 60kHz Comprimento de onda: 940 nm

Τεχνολογία	Υπέρυθρο Εύρος συχνοτήτων: από 20kHz ως 60kHz Μήκος κύματος 940nm
Используемая технология	Инфракрасный Диапазон частот: 20-60 кГц Длина волны: 940 нм
Teknoloji	Kızılıtesi Frekans aralığı: 20kHz - 60kHz Dalga boyu: 940nm

- Montage
- Montage
- Mounting

- Montage
- Montaje
- Montagem


- Συναρμολόγηση
- Монтаж
- Montaj

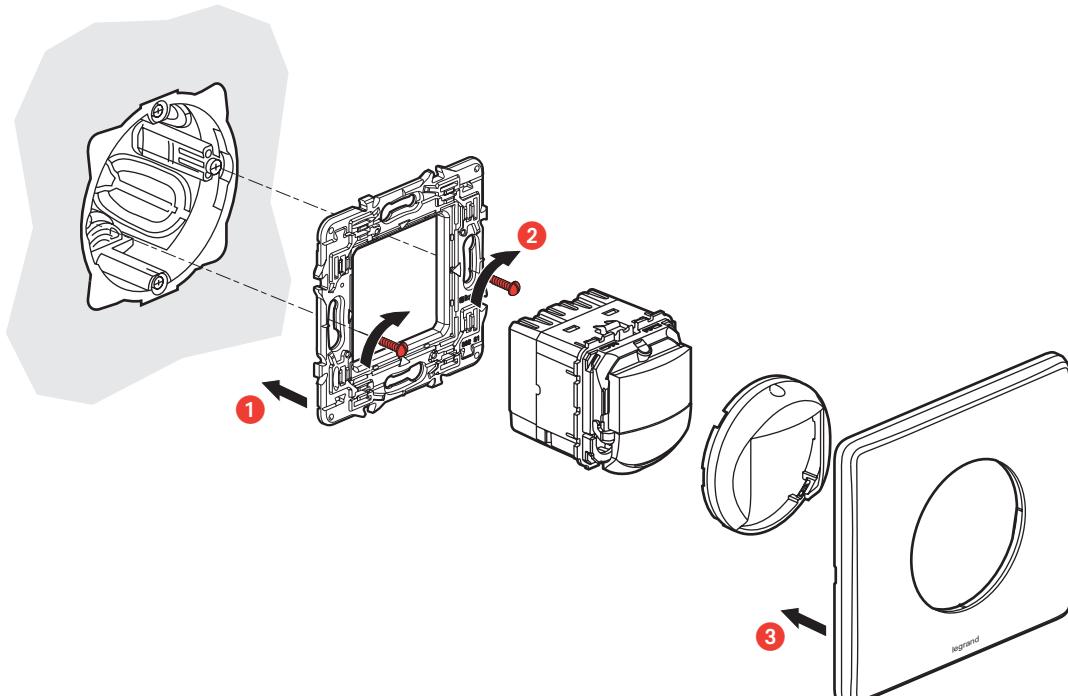

- Démontage
- Demontage
- Dismounting

- Demontage
- Desmontaje
- Desmontagem




- Αποσυναρμολόγηση
- Демонтаж
- Sökme

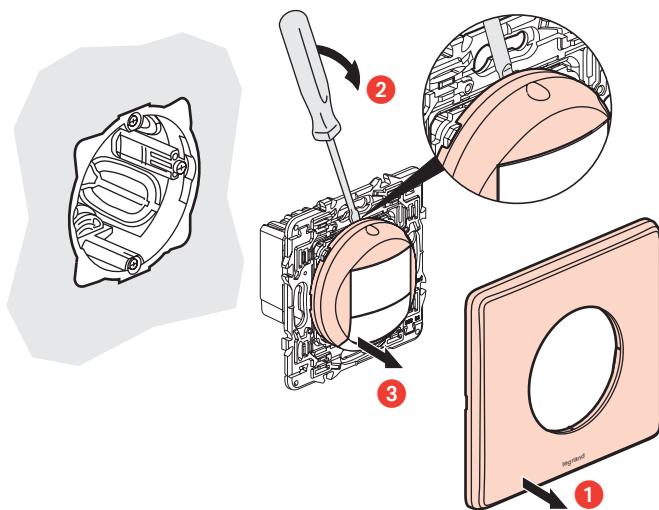

Angles de détection horizontale (pente de 0°)
Hoeken horizontale detectie (helling 0°)
Horizontal detection angles (0° incline)
Horizontale Erfassungswinkel (0° Neigung)
Ángulos de detección horizontal (pendiente 0°)
Ângulos de detecção horizontal (0° inclinação)
Γωνίες οριζόντιας ανίχνευσης (κλίση 0°)
Углы горизонтального обнаружения (0° наклон)
Yatay algılama açıları (eğim 0°)

Angles de détection horizontale (monté incliné à 20° vers le bas)
Hoeken horizontale detectie (gemonteerd met helling 20° naar beneden)
Horizontal detection angles (20° incline from top view)
Horizontale Erfassungswinkel (20° abwärts geneigt)
Ángulos de detección horizontal (montado inclinado a 20° hacia abajo)
Ângulos de detecção horizontal (20° inclinação em descida)
Γωνίες οριζόντιας ανίχνευσης (κάλοι 20° προς τα κάτω)
Углы горизонтального обнаружения (20° наклон вниз)
Yatay algılama açıları (aşağı eğim 20°)


Angles de détection horizontale (monté incliné à 20° vers le haut)
Hoeken horizontale detectie (gemonteerd met helling 20° naar boven)
Horizontal detection angles (20° incline from bottom view)
Horizontale Erfassungswinkel (20° aufwärts geneigt)
Ángulos de detección horizontal (montado inclinado a 20° hacia arriba)
Ângulos de detecção horizontal (20° inclinação em subida)
Γωνίες οριζόντιας ανίχνευσης (κάλοι 20° προς τα πάνω)
Углы горизонтального обнаружения (20° наклон вверх)
Yatay algılama açıları (yukarı eğim 20°)

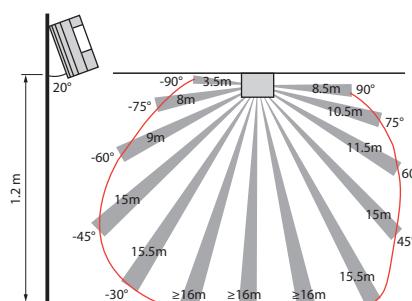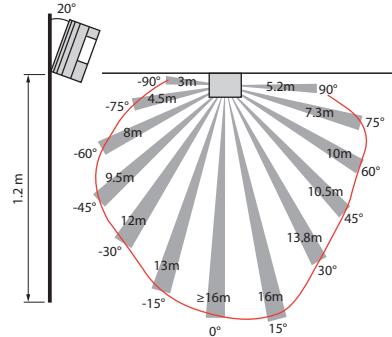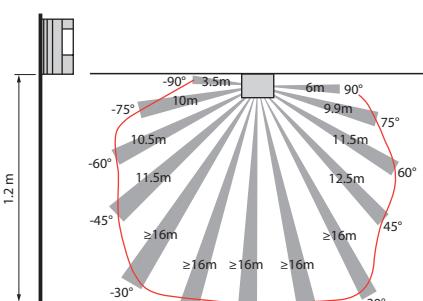

- Câblage
- Kabelwerk
- Cabling

- Verdrahtung
- Cableado
- Cablagem

- Καλωδίωση
- Схема подключения
- Kablolalar

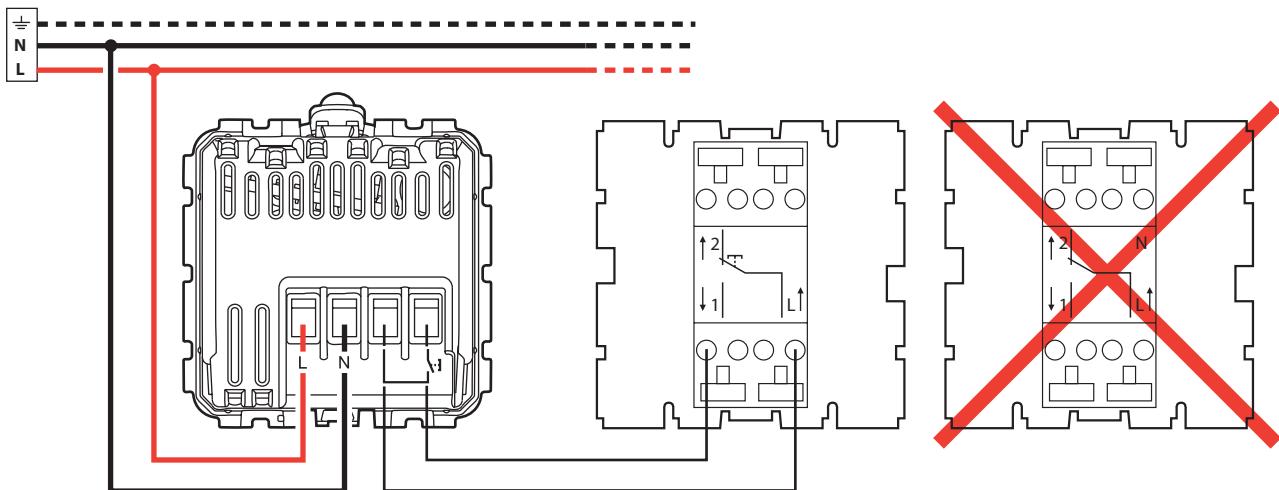

Cellule d'APPRENTISSAGE

Inleescel

Sensor learning cell

Sensor-Lernzelle

Celda de aprendizaje

Célula de memorização

Κύτταρο εκμάθησης

Обучающая ячейка

Sensör tanıtma hücresi

Bouton mode APPRENTISSAGE

«LEARN»-knopf

LEARN Button

LEARN-Taste


Botón LEARN

Botão LEARN

Koumple LEARN

Кнопка LEARN

ÖĞRETME modu butonu

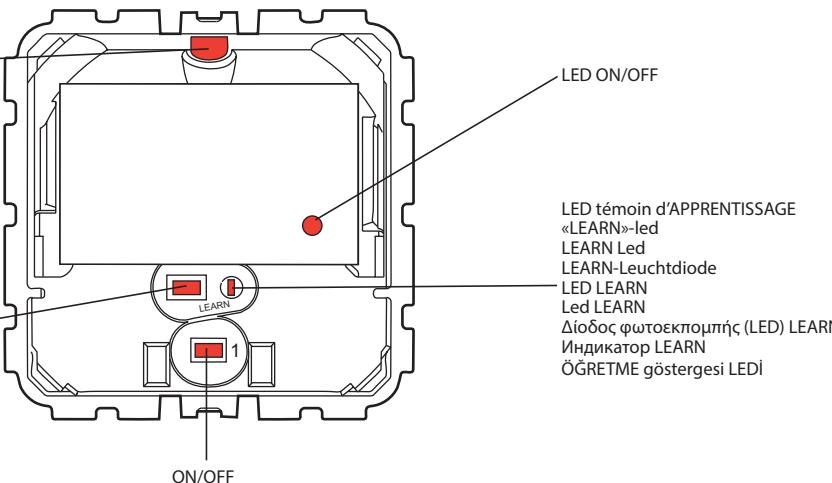

Consignes de sécurité

(FR) (LU) (BE) (CH)
Avant toute intervention, couper le courant.
Respecter strictement les conditions d'installation et d'utilisation.

Sicherheitshinweise

(DE) (CH)
Vor jeglichem Eingriff die Spannungsfreiheit sicherstellen.
Einbau- und Gebrauchsanleitungen sind genau zu beachten.

Συστάσεις ασφαλείας

(GR) (CY)
Πριν από οποιαδήποτε επέγειαση, διακόψτε την παροχή ρεύματος.
На трапеите ανατηρά τις συνθήκες εγκατάστασης και χρήσης.

Veiligheidsvoorschriften

(NL) (BE)
Onderbrek voor enige ingreep de stroom.
Neem de installatie- en gebruiksvoorwaarden nauwgezet in acht.

Consignas de seguridad

(ES)
Antes de realizar cualquier intervención, cortar la corriente eléctrica.
Respetar estrictamente las condiciones de instalación y uso.

Меры предосторожности

(RU)
Отключить питание перед проведением любых ремонтных работ.
Строго соблюдайте требования к условиям монтажа и эксплуатации.

Safety instructions

(GB) (IE)
Make sure the power supply is disconnected before any intervention.
Strictly comply with instructions for installation and use.

Instruções de segurança

(PT)
Antes de qualquer intervenção, desligar a corrente.
Respeitar rigorosamente as condições de instalação e de utilização.

Меры предосторожности

(TR) (CY)
Herhangi bir müdahaleden önce, akımı kesiniz.
Yerleştirme ve kullanım koşullarına titizlikle riayet ediniz.

CONFORMITY CE DECLARATION

We declare that the products satisfy the provisions of :


The directive 1999/5/CE of the european parliament
and of the council of March 9th, 1999

On condition that they are used in the manner intended and/or in accordance with the current installation standards and/or with the manufacturers recommendations

Channel availability depends on local country regulations. Wireless LAN system administrator must choose correct country of operation. Channels are then automatically configured to comply with specified country's regulations.

These provisions are ensured for directive 1999/5/CEE by conformity to the following standards :

EN 301 489
EN 300 328
EN 60669-2-1

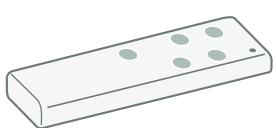

- Programmation
- Programmering
- Programming

- Programmierung
- Programación
- Programação

- Программация
- Программирование
- Programlama

OFF


ON

SLOW FLASHING (1s)




QUICK FLASHING (0.25s)

FLASHING MODE (60ms)

Programmation/Programming

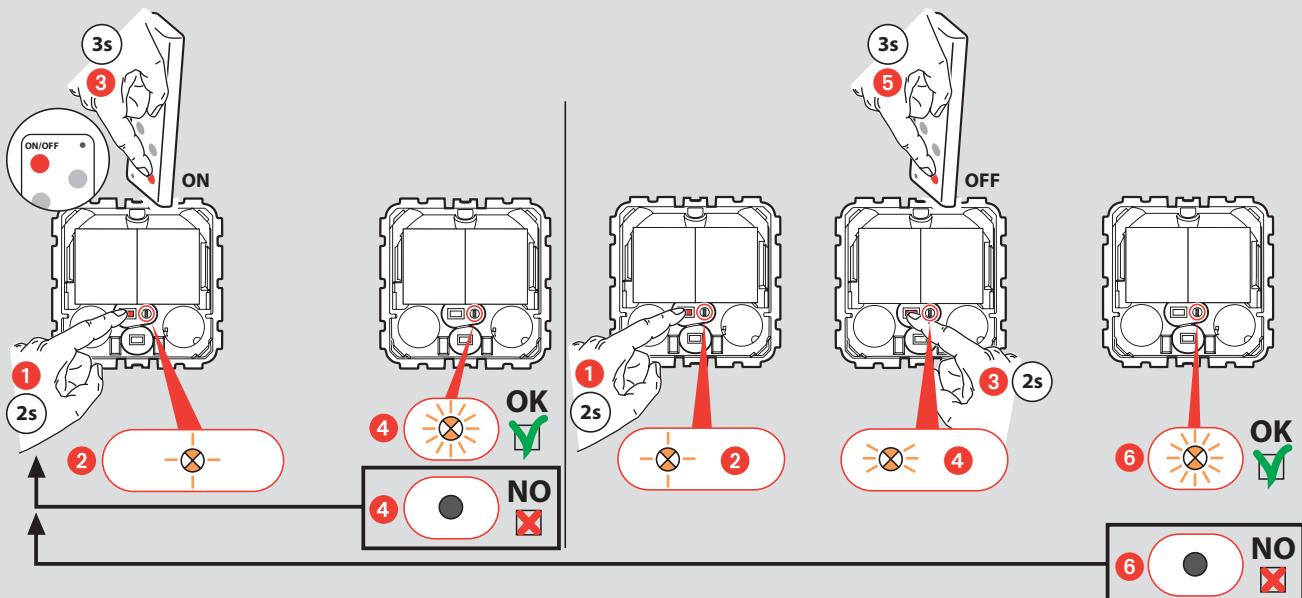

Test de fonctionnement/Function test

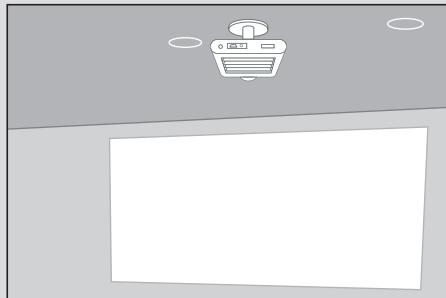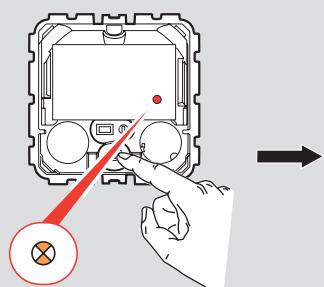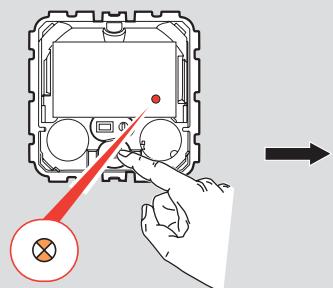

Remise en configuration usine
Return to factory settings

